
ASSEMBLY INSTRUCTIONS

ITEM CODE : **IN 3693**

ITEM DESCRIPTION : **2 DRAWER BEDSIDE**

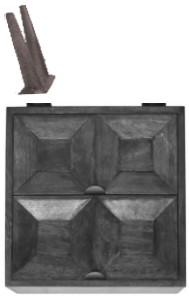


1

Reverse the bedside & place the leg as shown & align the leg to match the apron.



Insert the Bolt to fix the leg with the unit top and tighten the nut with the washer as shown in fig1

2

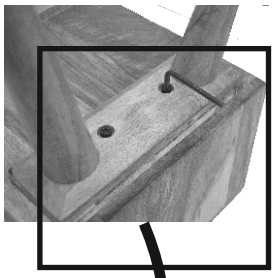

3

Fix the other leg in the similar way



4

Reverse the bedside straight. Now your bedside is ready for use



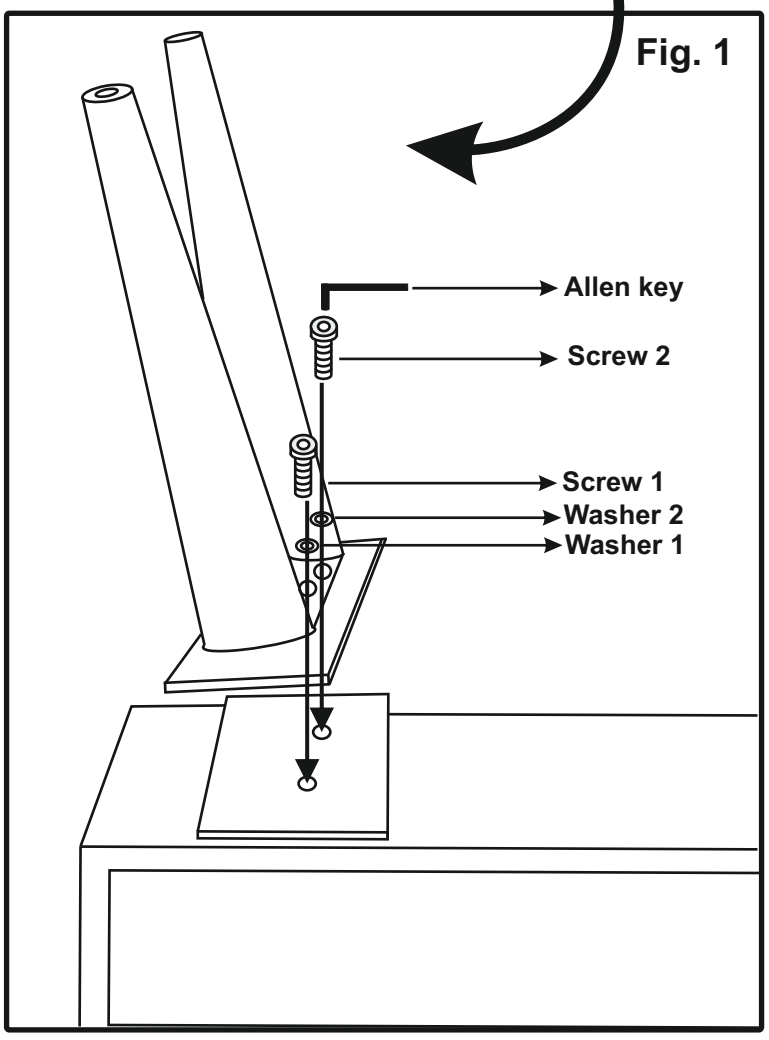


Fig. 1