
ASSEMBLY INSTRUCTIONS

ITEM CODE : IN260

ITEM DESCRIPTION: 1 DRAWER BEDSIDE

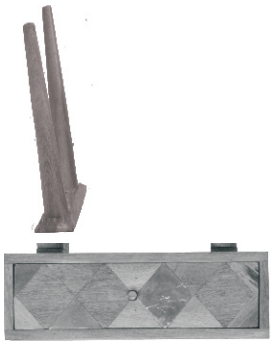


1

Reverse the bedside & place the leg as shown & align the leg to match the apron.




Insert the Bolt to fix the leg with the Bedside top and tighten the nut with the washer as shown in fig1

2

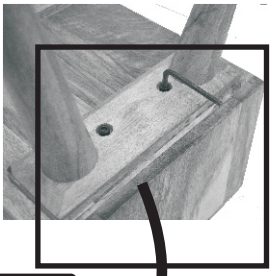

3

Fix the other leg in the similar way

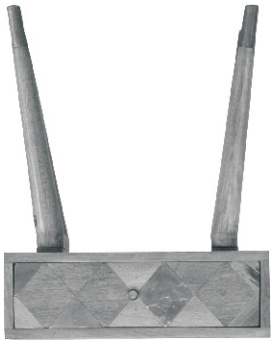

4

Reverse the bedside straight. Now your bedside is ready for use



