ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 1814

ITEM DESCRIPTION: BEDSIDE



1

Reverse the Bedside & place the leg as shown & align the leg to match the apron.



Insert the Bolt to fix the leg with the unit top and tighten the nut with the washer as shown in fig1

2

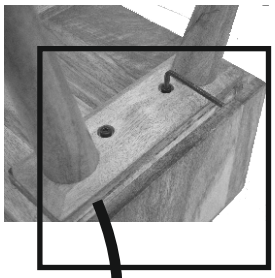

3

Fix the other leg in the similar way



4

Reverse the unit straight. Now your Bedside is ready for use



